
# Installation Manual on Continuous ink supply system (CISS) For printer Brother 51/57/10/960/1000

Thank you for using the "INKSYSTEM" Continuous ink supply system. It is the best device for an inkjet printer, and it will definitely decrease your printing costs. Before using this system, please read this manual carefully.

### I. Inspection & Unpacking

1. Accessories	
1) Continuous ink supply system	1
2) Air Filter	1
3) Sponge	1
4) Injector	1
5) Long needle	1
6) Short needle	1
7) Protection clamp	

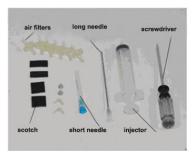



Pic. 1-1

Pic. 1-2


### 2. Inspection before installation

- A. Check whether all the accessories are present.
- B. Check whether the system is retrieved normally or too much air is remained in the connecting tubes (length over 20cm).

### II. Test the printer

1. Check the printer's condition to see whether it is normal or not (2-1and2-2) and check its mechanics.

2. Print a test sheet to see if the nozzle is normal. If it is abnormal, please clean the print head untill nozzle is normal. As for nozzle checking and print head cleaning, please refer to the printer manual.

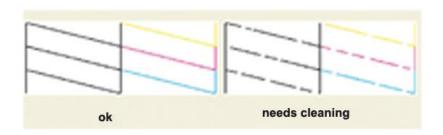

Pic. 2-1, 2-2

### 3. If printer is alright, please print a picture to see the result.

*Note: This system will not cause any damage on your printer.* 

#### **II. Installation Procedures**

## 1. Make the system ready

Put this system on the left side of printer, tidy up ink flow tubes (3-1-1), pull the air balance plug out (3-1-2) and replace it with an air filter with the bigger side downwards (3-1-3). This is repeated for each air balance plug. Keep the air balance plugs for future use.







Pic. 3-1-1

Pic. 3-1-2

Pic. 3-1-3

## 2. Take the original cartridge out

Open the cover on the right side of the printer (3-2-1), open the cartridge cover (3-2-2), then take the original cartridge out (3-2-3).







Pic. 3-2-1

Pic. 3-2-2

Pic. 3-2-3

### 3. Pierce ink flowing hole in the inner cartridge

Take pliers and pierce ink hole in the inner cartridge (3-3-1).

Note: if the pliers stained with ink, you have to wipe pliers clean for the next cartridge.



Pic. 3-3-1

### 4. Install system cartridge

Install system special cartridge (3-4-1), impact into the special cartridge (3-4-2). Note: Please do not press with force if you feel obvious resistance. Maybe the ink flowing hole have not been pierced or the cartridges have not in the right place-Please check out the problem and readjust cartridge untill it is in the exact place.





Pic. 3-4-1

Pic. 3-4-2

## 5. Cover the right side of the printer

Tidy up the ink tube, cover cartridge cover and export tube from space between cartridges (3-5-1, 3-5-2). Cover the right side of the printer (3-5-3), please note that the cover will press the ink tubes and affect the fluency of the ink. Therefore, please try to make the ink tube upwards. Meanwhile, check the ink tube usually to make sure it isn't distorted.







Pic. 3-5-1

Pic. 3-5-2

Pic. 3-5-3

#### III. Check air balance tube

During printing, if you find some abnormal cases, such as bad output, ink drip out on paper, then you need to check the air balance tube to see if exist ink. If yes, please do according to the manual of "ink pump out from balance tube".

### IV. Warnings

- 1. During printing, please do not take cartridges over than the printer. Please keep ink tank and printer in the same level.
  - 2 During printing, do not inverse, lift up or lower ink tanks.
  - 3 Please do not block up ink tanks for curiosity or for fear of less ink
- 4. Use CISS at clean environment and within the temperature range 15-35 degrees.
  - 5 Please use high-quality ink to prolong and to increase printing quality.
- 6 During shipment or storage, please do not turn the system over and always have the holes sealed with plugs, to prevent ink leakage.
  - 7. Please do not shake cartridges to avoid leaking.

### V. Product Warranty

INKSYSTEM warrants its products to be free from defects in material or workmanship. Rarely the equipment partly or completely fails within the warranty period. In these cases we do everything possible to ensure that our customers are satisfied with the purchase.

The INKSYSTEM CISS installation is free in any of the representative offices.

The warranty repairs are done quickly, with good quality and for free. The warranty duration is 12 months from the date of retail sale. Every product has a Warranty Certificate. The transportation of the failed product is provided by its owner.

Please note that the ink and the photo paper are expendable materials and there can be no returning of unsealed ink tanks and photo paper packages. When defects are found by the service managers, a replacement for a new product is performed.

Warranty certificate

(Product) Continuous ink supply system (Model Name)	Seller company
(Serial N2)	_
(Date of Purchase)	SEAL
(Warranty Period)  1 year from the date of retail purchase	e e

The warranty conditions are agreed and accepted. No claims against the product appearance and the list of equipment.

Customer <sup>3</sup>	's	sign	ature	3
Customer	S	SIEII	atui	۰