

# Installation Manual on Continuous ink supply system (CISS) For printer EPSON R270/ R260/R265/R270B/R360/R380/R390/ RX560/RX580/RX590/RX595/RX610/RX680/RX685/RX690

Welcome your using Continuous ink supply system from “INKSYSTEM”, It is the best device for inkjet printer, and it will definitely decrease your printing cost. Before using this system, please read this manual carefully, it will help you to use this device properly, safely and effectively. The pictures in this manual may be different with the real ones. It's just for your reference.

## I. Instruction on opening

### 1. Accessories


1) Continuous ink supply system .....	1
2) Air Filter .....	6
3) Sponge .....	1
4) Injector .....	1
5) Long needle .....	1
6) Short needle .....	1
7) Protection clamp .....	1
8) Installation Manual .....	1
9) Certificate on free installation.....	1



Pic. 1-1



Pic. 1-2

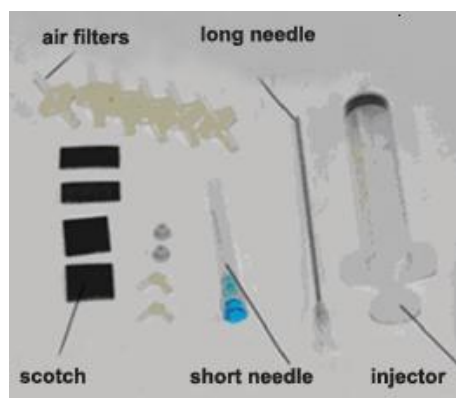

Pic. 1-3

- A. Check whether all the accessories are available or not.
- B. Check whether the system is pulling out if tube is disconnected

## II. Test printer

1. Check printer status to see whether it is normal or not, and check its mechanics for smooth and any damage.
2. Print a test sheet on nozzle check to see if gaps appear on lines in the printout.



Pic. 2-1

3. If printer is alright, please print a picture to see the result.

**Note:** This system will not cause any damage on your printer.

## II. Installation Procedures

### 1. Make the system ready

Put this system on the left side of printer, tidy up ink flow tubes (3-1-1), pull the air balance plug out and replace it with an air filter with the bigger side down-wards (3-1-2). This is repeated for each air balance plug. Keep the air balance plugs for future use.



Pic. 3-1-1



Pic. 3-1-2

### 2. Move out cartridge holder:

#### A. R260/R265/R270

Press "cartridge change" button (3-2-1), move cartridge holder out to cartridge change position, plug off power source (3-2-2).



Pic. 3-2-1



Pic. 3-2-2

B. R360/R380/R390

C. RX560/RX580/RX590/ RX585/RX595/R^610/RX680

Press "setup", Press "▶" to InkLevels" , then press "OK" , press "▼" to "Change Ink Cartridge" , choose "OK". Mover out cartridge holder (3-2-3), plug off the power source.



Pic. 3-2-3

### 3. Take cartridge cover off

A. R260/R265/R270

B. R360/R380/R390

Use screwdriver (3-3-1), push screwdriver forward to let cartridge cover move for 2mm (3-3-2), use hand to press cover clip, use screwdriver to insert position, lift up the clip upside (if clip broke, it does not matter), then take away cover clip and take cartridge cover off.



Pic. 3-3-1



Pic. 3-3-2

C. RX560/RX580/RX590/RX585/RX595/RX610/RX680/RX685/RX690

Open cartridge cover a little, insert screwdriver, push screwdriver, lift up cartridge cover, and then take cover off.

#### 4. Insert ink cartridges

Take out original ink cartridges, insert system cartridges according the color order, press down the cartridges tightly (3-4-1).

#### 5. Adjust tube fix

A.R260/R265/R270 no needs adjustment

B. R280/R285/R290 no needs adjustment

C.R360/R380/R390 no needs adjustment

D.RX560/RX580/RX590 needs adjustment as follows:

The two stickers of these models should do adjustment (unless dealers do it in advance), otherwise, it will damage the function. Use one hand to scratch ink tube, another hand mover first sticker to 2cm as 3-5-1, then move second sticker to 8cm as 3-5-2.



Pic. 3-5-1



Pic. 3-5-2

#### 6. Fix ink tube

A. R280/R285/R290

Tidy up ink tube, fix tube as (3-6-1). During printing, the ink tube and sticker can't be pulled off, can't be twist as (3-6-2).



Pic. 3-6-1



Pic. 3-6-2

B. R260/R265/R270

### C.R360/R380/R390

Tidy up ink tube, fix tub. During printing, the ink tube and sticker can't be pulled off, can't be twist.

### D.RX560/RX580/RX590/RX585/RX595/RX610/RX680/RX690

Tidy up ink tube, fix tube. During printing, the ink tube and sticker can't be pulled off, can't be twist

## 7. Check ink tube

Move cartridge holder, be sure it will not be clogged by sticker, then move cartridge holder to left side(3-7-1), then to right side(3-7-2), check if the ink tube will be too long or too short. Generally, the tube has been adjusted to the right size before shipment, please double check.



Pic. 3-7-1



Pic. 3-7-2

## 8. Adjust tube length

If step 7 is ok, skip this step.

Press sticker, then lengthen it (3-8-1) or shorten it (3-8-2), redo step 8 to adjust tube to right lengthen.



Pic. 3-8-1 Pic.



Pic. 3-8-2

## 9. Fix ink tube

A. R280/R285/R290

B. R260/R265/R270

C. R360/R380/R390: Fix sticker to 3-9-1, pay attention not let printer cover to crush ink tube when close the cover (3-9-2), otherwise the ink can not flow smoothly.



## D. RX560/RX580/RX590/RX585/RX595/RX610/RX680/RX690



Pic. 3-9-1



Pic. 3-9-2

### 10. Ready for print

Plug power source on (3-10-1), turn the printer on (3-10-2), and check if printer work or not.




Pic. 3-10-1



Pic. 3-10-2

### 11. Test printer nozzle

Enter printer nozzle inspection option (3-11-1), print nozzle test sheet. If it is normal (3-11-2), then start printing. If line is missing (3-11-3), please clean the nozzle cleaning. If one color is missing, then maybe there is air in nozzle. If it is still a little line missing after cleaning, please turn printer off and let it stay turned off for one hour or more. Please contact your local distributor if still have problem.

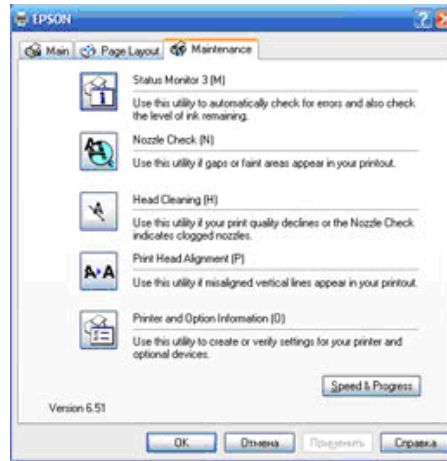

Pic. 3-11-1

## 12. Product Warranty

INKSYSTEM warrants its products to be free from defects in material or workmanship. Rarely the equipment partly or completely fails within the warranty period. In these cases we do everything possible to ensure that our customers are satisfied with the purchase.

The INKSYSTEM CISS installation is free in any of the representative offices.

The warranty repairs are done quickly, with good quality and for free. The warranty duration is 12 months from the date of retail sale.

Please note that the ink and the photo paper are expendable materials and there can be no returning of unsealed ink tanks and photo paper packages. When defects are found by the service managers, a replacement for a new product is performed.

**Please adhere to the following points to receive a warranty service as soon as possible:**

When accepting the product check if the warranty certificate is filled in correctly.

- Keep the original receipt that contains the date of purchase information.
- Adhere to operating conditions that are provided in the User's Manual, or on the web-page of the specific product.

**We cannot provide a warranty repair under several conditions:**

- If the warranty certificate is wrongly filled in.
- If the device has mechanical damages: chippings, dents, fractures, scratches, etc.
- If the identification information was removed or the information identification has been complicated in any possible way: additional notes, stickers, etc.
- If the user has previously performed a repair or change in the internal parts of the device.

The "INKSYSTEM" Company excludes for itself any liability for incidental, consequential, indirect, special, or punitive damages of any kind to people, pets or property if the stated damages have been affected because of rules and operational

conditions / product installation disregard. The Company also excludes any liability for intentional or careless actions of the user or third parties, for loss of revenue or profits, loss of business, loss of information or data, or other financial loss arising out of or in connection with the sale, installation, maintenance, use, performance, failure, or interruption of the possibility of such damages.

## Warranty certificate

<p><i>(Product)</i></p> <p>Continuous ink supply system</p> <p><i>(Model Name)</i></p> <p>_____</p> <p><i>(Serial No)</i></p> <p>_____</p> <p><i>(Date of Purchase)</i></p> <p>_____</p> <p><i>(Warranty Period)</i></p> <p>1 year from the date of retail purchase</p>	<p><b>Seller company</b></p> <p><b>SEAL</b></p>
-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------

The warranty conditions are agreed and accepted. No claims against the product appearance and the list of equipment.

Customer's signature

---